



# MagnaWave Remote

## User Manual



---

Please review these instructions completely  
and save the document for future reference.

# MAGNAWAVE

Louisville, KY 40299  
(833) 624-6292

Dear Valued Customer,

From all of us at MagnaWave, we'd like to extend our sincerest thanks and gratitude for your recent purchase with us! It is truly our pleasure to serve you.

Here at MagnaWave, we strive to provide the highest level of customer service possible. We hope that your experience with us has been a pleasant one, and that we can be of service to you again in the future. As a valued customer your comments and opinions are very important to us. If you have any concerns, questions or comments we hope that you will bring them to our attention by calling 1-833 MAGNAWAVE or emailing us at [support@mwpemf.com](mailto:support@mwpemf.com).

If there are any other ways that we can serve you better now, or in the future, please let us know. We love hearing from our customers! Thank you again for your business.

Sincerely,

A handwritten signature in black ink that reads "Alane Paulley". The script is fluid and cursive, with the first letter of each word being capitalized and larger than the others.

Alane Paulley  
President  
MagnaWave

The MagnaWave Remote is a **BLE (Bluetooth Low Energy)** tool with a wide range of applications, and this preface is dedicated to outlining its appropriate safety measures and intended uses.

BLE Remote and machine each contain the following radio:

M/N: WROOM32E

FCC ID: 2A9ZM-WROOM32E

IC: 29943-WROOM32E

## Preface

---

If the remote and machine are pairing for the first time, the user must go through the authentication process by typing in the password displayed on the machine's screen.

- Using the **Up/Down Buttons** to change each number, the Start Button to advance the cursor, and the Stop Button to backspace the cursor.
- When the connection is successful, the remote will display **"Paired: Serial Number"** and begin receiving information from the machine.

An error icon will appear in this case that indicates a fault state with the machine. *(Most commonly this means the coils are not plugged into the machine).* The remote can disconnect from the machine by holding the **Stop Button** while connected. While disconnected, the **Stop Button** can be held again to scan for other machines.




*\*Remote should never be held or used directly over a PEMF attachment loop.*

## Helpful Tip

Please charge remote for 1-2 hours before using. The MagnaWave Remote can be used for 6-8 hours after fully charged.

# Remote Key

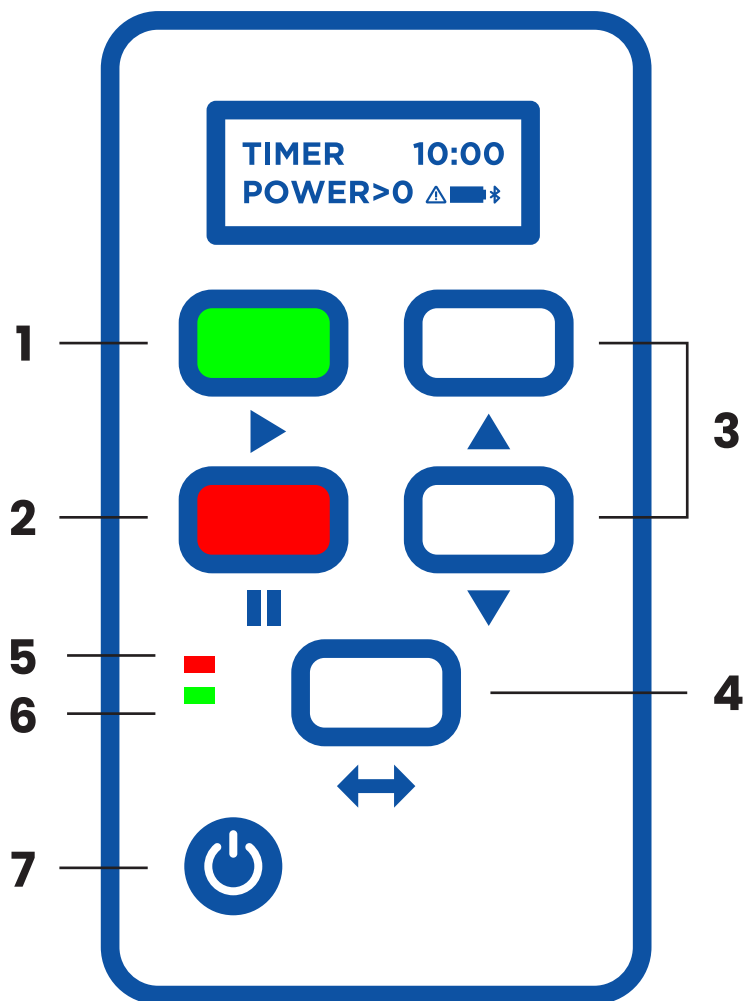

1. Play (Start Button)
2. Pause (Stop Button)
3. Up/ Down (Adjustment Buttons)
4. Slide Arrows (Mode Button)
5. Red LED: Charging
6. Green LED: Powered On
7. Power (On/Off Button)

## Display Screen

- Session Time & Power Level
- Error Icon \*No loops detected
- Battery Icon \*Charge level
- Bluetooth Icon \*Successfully paired

## Basic Operations

---

Hold down the **Power Button** until the splash screen is displayed will turn on the remote. (*Holding the **Power Button** until the screen goes blank will turn off the remote.*)

The remote will automatically start scanning for nearby machines when powered on:

- If one machine is found, the remote will wait for confirmation to attempt to pair.
- Press the **Green Button** to confirm the attempt to pair.
- Press the **Red Button** to decline the attempt to pair.

If multiple machines are found, it will bring up a menu to select a machine to pair:

- Use the **Up/Down Buttons** to scroll through the selectable machines. The **Start Button** selects a machine to pair to.
- *If no machines are found nearby, a scan can be initiated again by holding the **Stop Button**.*

The machine is only available to be paired with a new remote for the first 60 seconds of being powered on. After this, it is only possible to connect to the machine from a remote that has previously paired.

The remote will display the Serial Number of the machine it is attempting to pair to by displaying **“Pairing: Serial Number”**.

- If the remote fails pairing, it will display **“Failed: Serial Number”** of the attempted connection. Turn the machine off and on again and scan with the remote to connect during the pairing window.

## Safety Feature


---

If the remote goes out of range or is suddenly powered off, the machine will pause its session.

- To prevent this, disconnect the remote from the machine by holding the **Stop Button** before powering off the remote.

# Installation

---

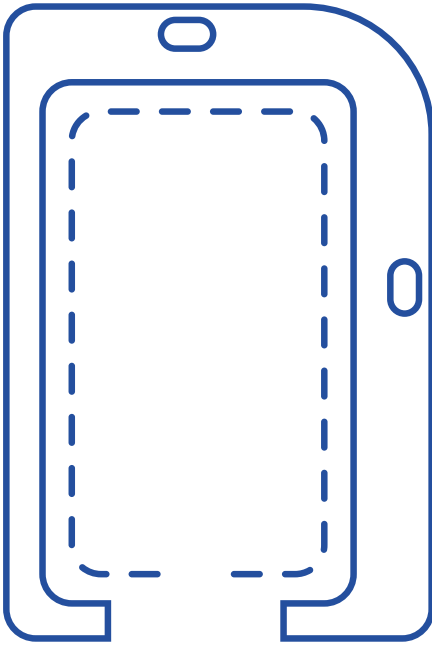

**Remote Case Holder**



**2x Phillip Head Screws**

The MagnaWave Remote comes with one case holder and two screws to install into the interior door of the MagnaWave machine.

1. Align the two holes of the case holder with the two corresponding holes in the top right corner of the interior door.
2. Place one screw into each hole and screw them until completely secure.
3. Installation is complete; place your MagnaWave Remote into the holder.

## Product Warranty

All MagnaWave machines are warranted to operate properly for a period of three (3) years from the date of the original purchase invoice. In the event of a malfunction during the warranty period, the manufacturer will repair this product to its original operating condition or replace the unit. Freight and insurance to and from manufacturer is not included. A return authorization number must be obtained from the manufacturer before products are returned for service.

**This remote is warranted from manufacturing defects for a period of six (6) months from the date of the original purchase invoice.**

The unit must be delivered postage paid with the then current owner's name and address, proof of purchase and description of difficulties encountered. The unit is to be shipped to the address designated by the manufacturer in the return authorization.

Such service, repair or adjustment of the equipment is assured to the original purchaser or new owners with properly documented transfers of ownership only. Warranty applies provided the equipment has not been tampered with. The case and/or unit cannot be opened, modified or damaged resulting from misuse, accident, water, grit, impact, physically broken parts or lack of proper care.

Additional extended warranty service, once standard warranty period has expired, is handled as a maximum out of pocket expense of \$700.00 in any given year for maintenance or repairs for the period of 7 years after the first 3 years.

The warranty is transferable for a \$25.00 administrative fee. Call (502) 742-7868 or contact us at **support@mwpmf.com**.

MagnaWave  
Louisville, KY 40299  
(502) 742-7868

---

Serial Number \_\_\_\_\_

# PEMF Made Easier.

